




Alarm status indications use the entire Touch Panel screen. See examples below.

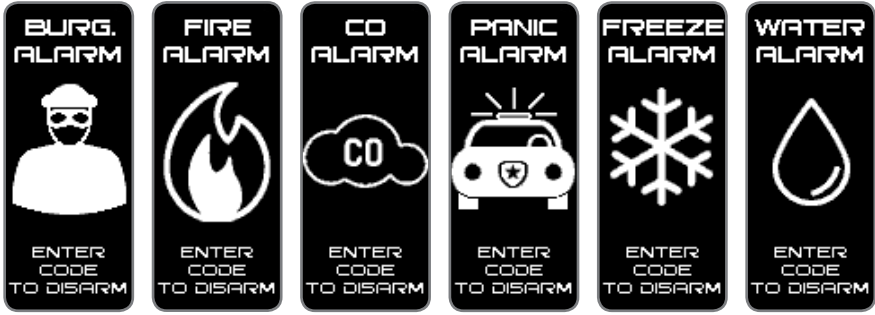


Change arming settings and chime mode using the quick settings tab. The quick settings tab is opened by pressing SELECT.

### Quick Settings Navigation

- Use UP/DOWN to select a setting.
- Use SELECT to enable/disable a setting.
- Use MENU to close the quick settings.

### Quick Settings Tips

- When *night arming* is enabled pressing ARM STAY will arm to NIGHT rather than STAY.
- The quick settings tab will automatically close after roughly 5 seconds of inactivity.

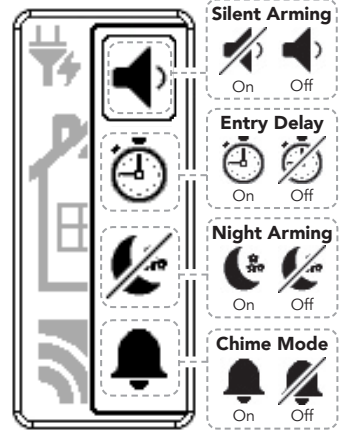

**Change Touch Panel settings** using the extended menu. Hold MENU until the Touch Panel chirps three times (roughly 3 seconds) to open the extended menu.

### Extended Menu Navigation

- Use SELECT to enable/disable a setting.
- Use MENU is used to close the extended menu.
- Use UP/DOWN to select a setting.
- Use the menu item numbers as “Hot Keys” to navigate or change a setting.

### Extended Menu Items

1. Enrollment - *Opens the Touch Panel enrollment menu*
2. Poll Slow/Fast\* - *Controls Touch Panel check-in interval*
3. Entry Off/On\* - *Enables/disables beeps during an entry delay -*
4. Exit Off/On\* - *Enables/disables beeps during an exit delay*
5. Btms Click/Beep - *Selects click or beep tone for button feedback*
6. Sensitivity - *Opens the button sensitivity menu*
7. Version - *Shows the hardware and firmware version*

\* Enabling these settings will significantly reduce battery life

